

## **Required Tools**

- AutoProPAD Key Programming Tablet
- Main Cable & OBD2-16 Connector
- Nissan 16+32 CGW Adapter
- Mercedes-Benz Infrared Key Emulator
- Main Cable (without OBD2 connector)
- Stable Wi-Fi Connection
- PC or smartphone

### **How to Connect**

Whether you're adding a key or processing for All-Keys-Lost, programming for the 2018+ Sylphy/Sentra requires an extra CGW (Controller Gateway) adapter. Please contact your dealer for this adapter. 16-Pin connector

Connects to main cable

The CGW module for Nissan Sylphy/ Sentra is located inside the driverside footwell above the pedals. To connect the vehicle to the device, locate and extract the wiring harness from the module and connect it to the adapter.



32-Pin connector

The other connector connects to the main cable. Connect the main cable to the device and the adapter to begin the process.

#### **The Process**

Open the diagnosis app and step through the following menus: Diagnosis > Immobilization > NISSAN (V27.10 or later version) > Program keys > Select from vehicle > China (Only partially) > New Sylphy(B18) > Key matching (All keys lost)

< 0	New Sylphy(B18)	
Key matching (Bypass)	Key matching (All key lost)	Clear engine DTCs
Read & write smart module configuration		
0 0 0	□ 0 0 <b>डि</b>	<b>₽ •</b>



The software will display 2 notices. Please read carefully and make sure you have completed all the processes before starting.

$\leq$										
	Key matchi	Warning 1. This t third-pa	g: function rty organ	Key m needs to nizations.	query th	e dyman	/ lost) nic passv	vord from	1	ine DTCs
	Read & write : config	2. This   the orig 3. You o for seco	process inal key. an only a ond time	will delet add 2 bra if you ne	e all the l ind new l eds to pi	keys first keys eacl rogram n	so pleas h time, pl nore than	e re-prog ease ope i 2 brand	ram rate it new	
			0	ĸ			Car	ncel		
	đ	Φ	Ø		0	٩	đ	¢	D	

< _D									
Key matchi Read & write : config	1. Pleas 2. Pleas 16+32 g connec	se conne se pull ou gateway a t the OBI	Key matching (All key lost) nnect to the network. Il out the gateway connector, then plug in Nissan ay adapter to connector that's been pulled out, and OBD socket to our device.					ine DTCs	
		01	ĸ			Car	ncel		
ē	¢	⊲	D	0	¢	đ	¢	۲	



After clicking "OK", the menu shown at right will appear. Hold a new key near the ignition switch then press "Read Key" to continue.

Key 2		Unused	
Key 3		Unused	
Key 4		Unused	
Please put the key that ne	ed to be read near the ignition	n switch, click "read key" button to contir	nue.
Please put the key that ne	ed to be read near the ignition	n switch, click "read key" button to contir	nue.

You can use this method to read 2 keys at a time. If you wish to program more keys, please select the "Add key" menu afterwards. Now click "Next."

< 0	Keyn	natching (	All key	lost)		
Key 1				Rea	ded	
Key 2				Rea	ded	
Key 3				Unu	ised	
Key 4				Unu	ised	
Prease put the key that her	o to be read near o	e ignition si	witch, cit	JK TEBU K	ey buttor	to continue.
Read key	Next	Exit				
¢ 13	⊲ □	0	0	đ	4	lacksquare

The device will display a notice. Please take a photo of the information shown and navigate to the website indicated in the dialog box.

Please leave this screen visible until you have uploaded the calculated results to the server.

DO NOT CLOSE THE APP! DO NOT TURN OFF THE SCREEN! DO NOT DISCONNECT THE DEVICE FROM THE VEHICLE AND/OR NETWORK, OR THE CODE WILL BE INVALIDATED AND THE ENTIRE PROCESS WILL HAVE TO BE REPEATED!

5 2	Key matching (All key lost)								
Key 1	_					Do	hoha		
Key 2	Key matching (All key lost)								
Key 3 Key 4 Please put the key	Please go to http://utils.xtooltech.com/sylphy/index.html Login with the following informations, download the authorization file to calculate, and upload the password file. Do not tell others your serial number and the dynamic code. ID:119 Serial number:X100PAD- Dynamic code:								ч.
	OK								
<b>T</b>	đ	Φ	0	0	J)	đ	æ	igodoldoldoldoldoldoldoldoldoldoldoldoldol	

5.

Open the website on your smartphone or PC. It will display as shown.



After inputting the serial number and the dynamic code shown on the device, you will see this dialog:



8.

Press the blue link to download the data. The data file received will be named "SupportDatal." Please note that the code can only be calculated through 3rd party organizations.



When the data is received from 3rd parties, the file will be named "SupportData2." Press the blue button to upload the data and the next page will display the results. The results will automatically be uploaded to the device so it is not neccessary to type the data in.

ID	119 (请模劝ID是咨与平板上量示是否一致,否则将会操作失败)
序列号	X100PAD-
VINB	
计算结束	+
	The results will be shown here

On the device, press "OK." The menu will show the keys as "Programmed."

< 0	Key matching (All key lost)							
Key 1			Programmed					
Key 2			Programmed					
Key 3			Unprogrammed					
Key 4			Unprogrammed					
Current number of keys		2						
Please put the key that need	I to be matched nea	ar the ignition sv	vitch, click "match key"	button to continue.				
Match key 1	Exit							
© ⊄	⊲ □	0 10	ല് പോ	$(\mathbf{b})$				

11.

Hold one of the programmed keys near the ignition switch and press "Match key" and check the results.

5 1						
Key 1				Progra	mmed	
Key 2				Progra	mmed	
Key 3	Keyn	natching	(All key	lost)		
Key 4 Current number of keys	The key ha	ed.				
Please put the key that nee		01	¢.			button to continue.
¢ 10	⊲ □	0	¢	đ	Ð	$\odot$